

CanaSafeTM

*...Protecting Globally,
Envisioning the Future...*


eliXair



THE NEW
PAGE
OF FACE
MASK

Start protecting yourself from foreign objects, use eliXair, it seals you against harmful particles and gases in the air. The new CanaSafe™ eliXair, respirator is packed with avant-garde features; that will allow you to experience safety and style at your industry. eliXair is one of the prolific product of CanaSafe™, when it comes to respiratory protection.


Being safe is like breathing, you never want to stop

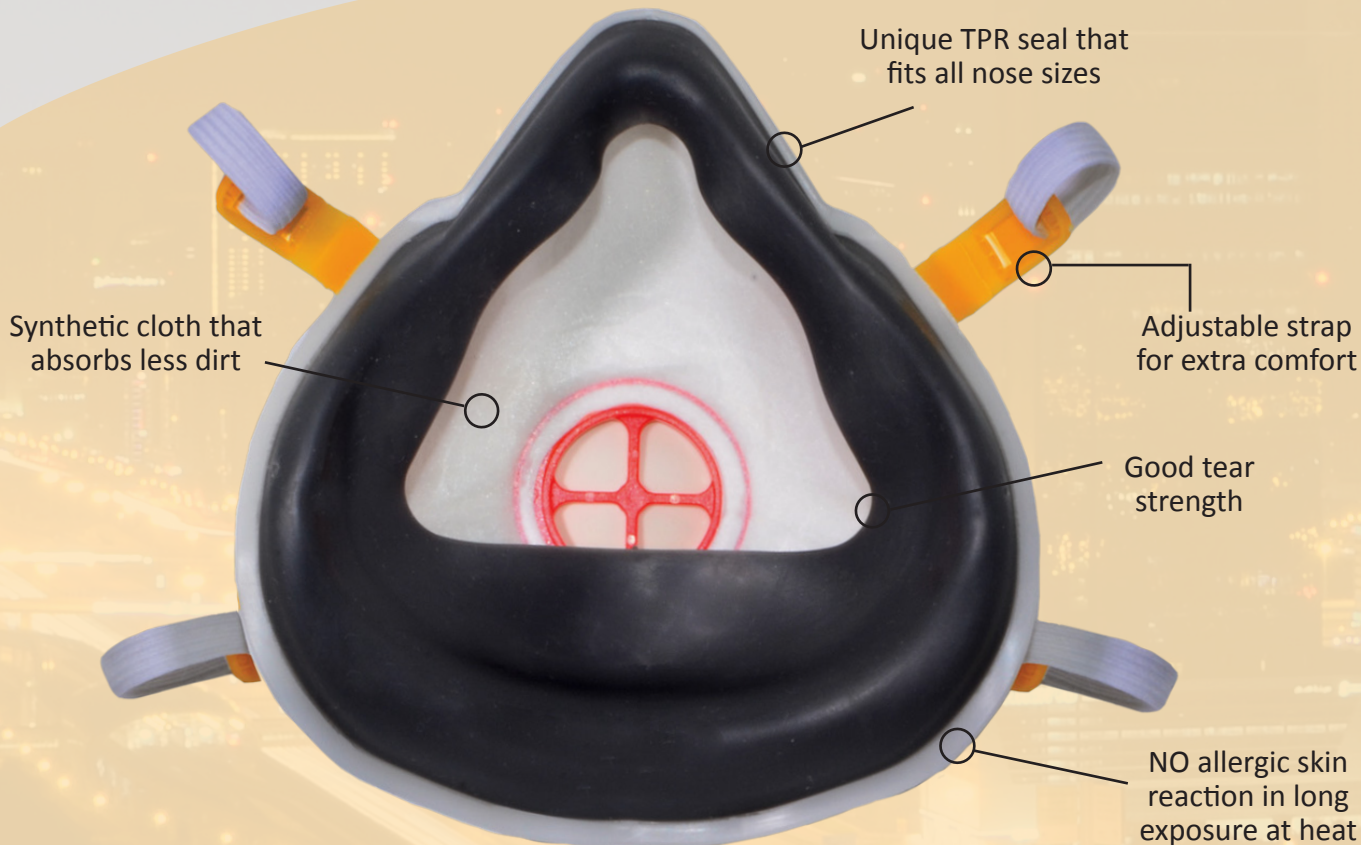

Warning to users

This respirator must be fit tested. If you cannot obtain a proper fit, do not use the respirator and do not enter the risk area.

How to use eliXair:

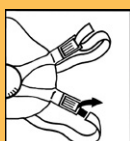

1. Thread top elastic strap through top buckles. Repeat for bottom strap and buckles. Place the bottom elastic strap around the head just below the ears. Untwist the strap.



2. Place the top elastic strap around the head, above the ears. Untwist the strap.



3. Adjust tension by pulling tabs of each strap, as shown.



4. The seal of the respirator on the face should be fit checked prior to wearing in the work area.

Product Ordering Information:

Product	Product Description	Unit/Case	Case Weight (lbs/kgs)	Case Dimensions (mm/in)
#72104	eliXair, Face sealing mask	100	22.93 lbs./ 10.4 kgs.	300 x 720 x 340 mm 11.81 x 28.35 x 13.39 in

